

Connect the air supply hoses to the PAIR reed valve covers.

Install the following:


- ignition coil (#2-#3)(page 17-7)
- spark plug cap (page 3-7)



CAM CHAIN TENSIONER LIFTER


REMOVAL

Remove the cam chain tensioner sealing bolt and sealing washer.

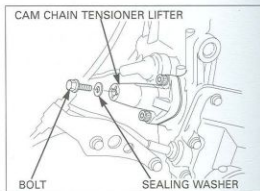

Turn the tensioner shaft fully in (clockwise) and secure it using the stopper tool to prevent damaging the cam chain.

See page 8-7 for details of the tool.

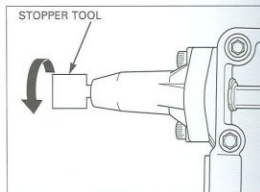

Remove the bolts and cam chain tensioner lifter.
Remove the gasket.

Note the installation direction of the gasket.

