


Unstake the clutch center lock nut.

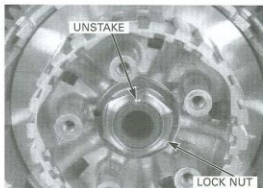


Hold the clutch center with the clutch center holder, then remove the lock nut.

TOOL:


Clutch center holder

07724-005002
(Equivalent commercially available)

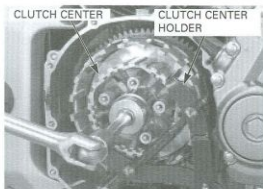

Discard the lock nut.

Remove the lock washer, thrust washer and clutch center.

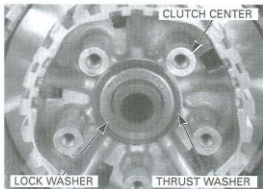

Remove the washer.

