


INSTALLATION

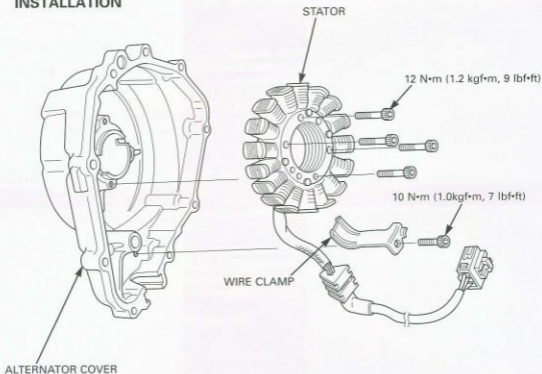


Install the stator into the alternator cover.

Apply sealant to the wire grommet, then install the wire grommet into the alternator groove securely. Install and tighten the stator mounting socket bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the wire clamp and tighten the bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

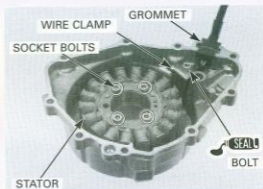

FLYWHEEL REMOVAL

Remove the alternator cover (page 10-2).

Remove the starter reduction gear shaft and reduction gear.

