


## FRONT WHEEL/SUSPENSION/STEERING

Pour out the fork fluid by pumping the fork tube several times.

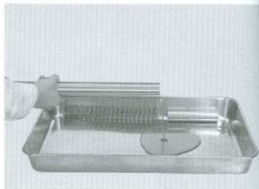

*If the fork damper turns together with the socket bolt, temporarily install the fork spring, spring seat, onto collar and fork bolt.*

Hold the caliper bracket in a vice with soft jaws or a shop towel. Remove the fork damper socket bolt and sealing washer.



Remove the dust seal.



*Do not scratch the fork tube sliding surface.*

Remove the oil seal stopper ring.

