


## SHOCK ABSORBER DISPOSAL PROCEDURE

Remove the damper reservoir cap.

Release the nitrogen from the reservoir by depressing the valve core.

### NOTICE


- Point the valve away from you to prevent debris getting in your eyes.
- Before disposal of the shock absorber, release the nitrogen by pressing the valve core. Then remove the valve from the shock absorber reservoir.

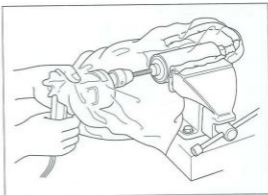

## INSTALLATION

Install the shock absorber into the frame with the reserve tank outlet facing to the left. Install the upper and lower mounting bolt/nut. Tighten the upper mounting nut to the specified torque.

**TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)**

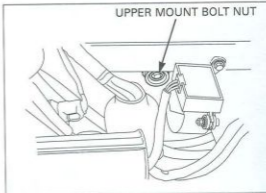

Tighten the lower mounting nut to the specified torque.

**TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)**



Install the reservoir into the reservoir band. Tighten the band screw securely.

Install the removed parts in the reverse order of removal.

