



Remove the bolts and drive chain slider.

Check the drive chain slider for wear or damage.

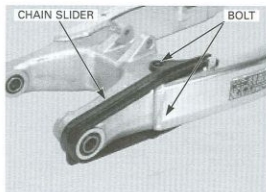

Remove the pivot collar and dust seals from the swingarm left pivot.

Check the dust seals and collars for damage or fatigue.

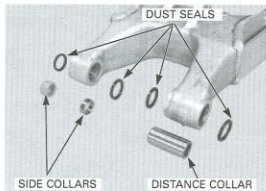

Turn the inner race of right pivot bearings with your finger.

The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if the races do not turn smoothly and quietly, or if they fit loosely in the pivot.

