

BRAKE PAD/DISC

FRONT BRAKE PAD REPLACEMENT


Always replace the brake pads in pairs to assure even disc pressure.

Remove the pad pin plug.




Check the brake fluid level in the brake master cylinder reservoir as this operation causes the level to rise.

Loosen the pad pins.
Remove the bolts and brake caliper.
Push the caliper pistons all the way in to allow installation of new brake pads.
Remove the pad pin and pad spring.

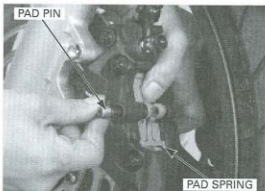

Remove the brake pads.

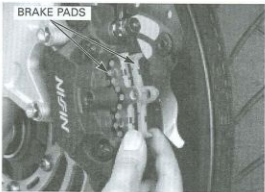

Install the new brake pads.
Install the pad spring with its arrow mark facing up as shown.

