



Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

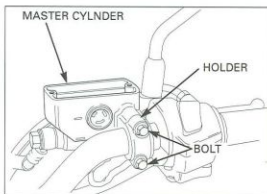


DISASSEMBLY

Remove the pivot bolt/nut and brake lever assembly.

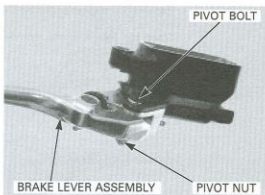

Remove the screw and brake light switch.

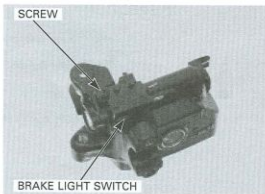

Remove the boot.

