



IGNITION SYSTEM

Remove the dowel pins and gasket.

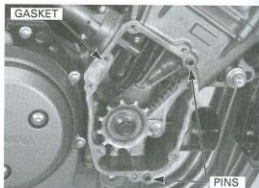


Remove the wire grommet from the cover.
Remove the bolts and ignition pulse generator.

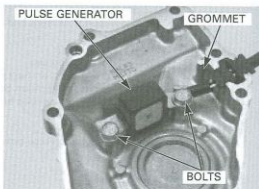

If the engine is out of the frame, remove the alternator cover (page 10-2) and hold the flywheel with the flywheel holder (07725-0040000), then remove the bolt.

Shift the transmission into 6th gear and apply the rear brake.

Remove the ignition pulse generator rotor bolt.

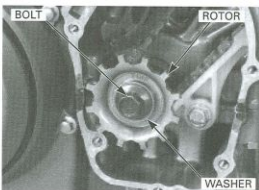

INSTALLATION

Install the ignition pulse generator rotor by aligning the wide groove with the wide teeth of the crankshaft.

Install the washer and rotor bolt.

