


Remove the bolts and speed sensor.

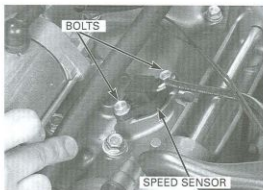

Remove the O-ring.

Route the speed sensor wire properly (page 1-28).


Installation is in the reverse order of removal.



COOLANT TEMPERATURE GAUGE /SENSOR

INSPECTION

Disconnect the ECT (engine coolant temperature) sensor wire connector from the sensor. Ground the ECT sensor connector Green/blue terminal with a jumper wire at the wire harness side.

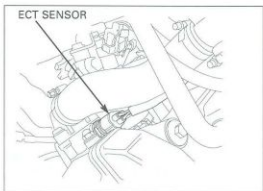

Turn the ignition switch ON and check the coolant temperature gauge.

Disconnect the thermo sensor wire connector from the ground immediately if the gauge needle moves fully to H.

NOTICE

Immediately disconnect the sensor wire connector from the ground when the needle move to H (hot) to prevent damage to the gauge.

