




# THROTTLE BODY

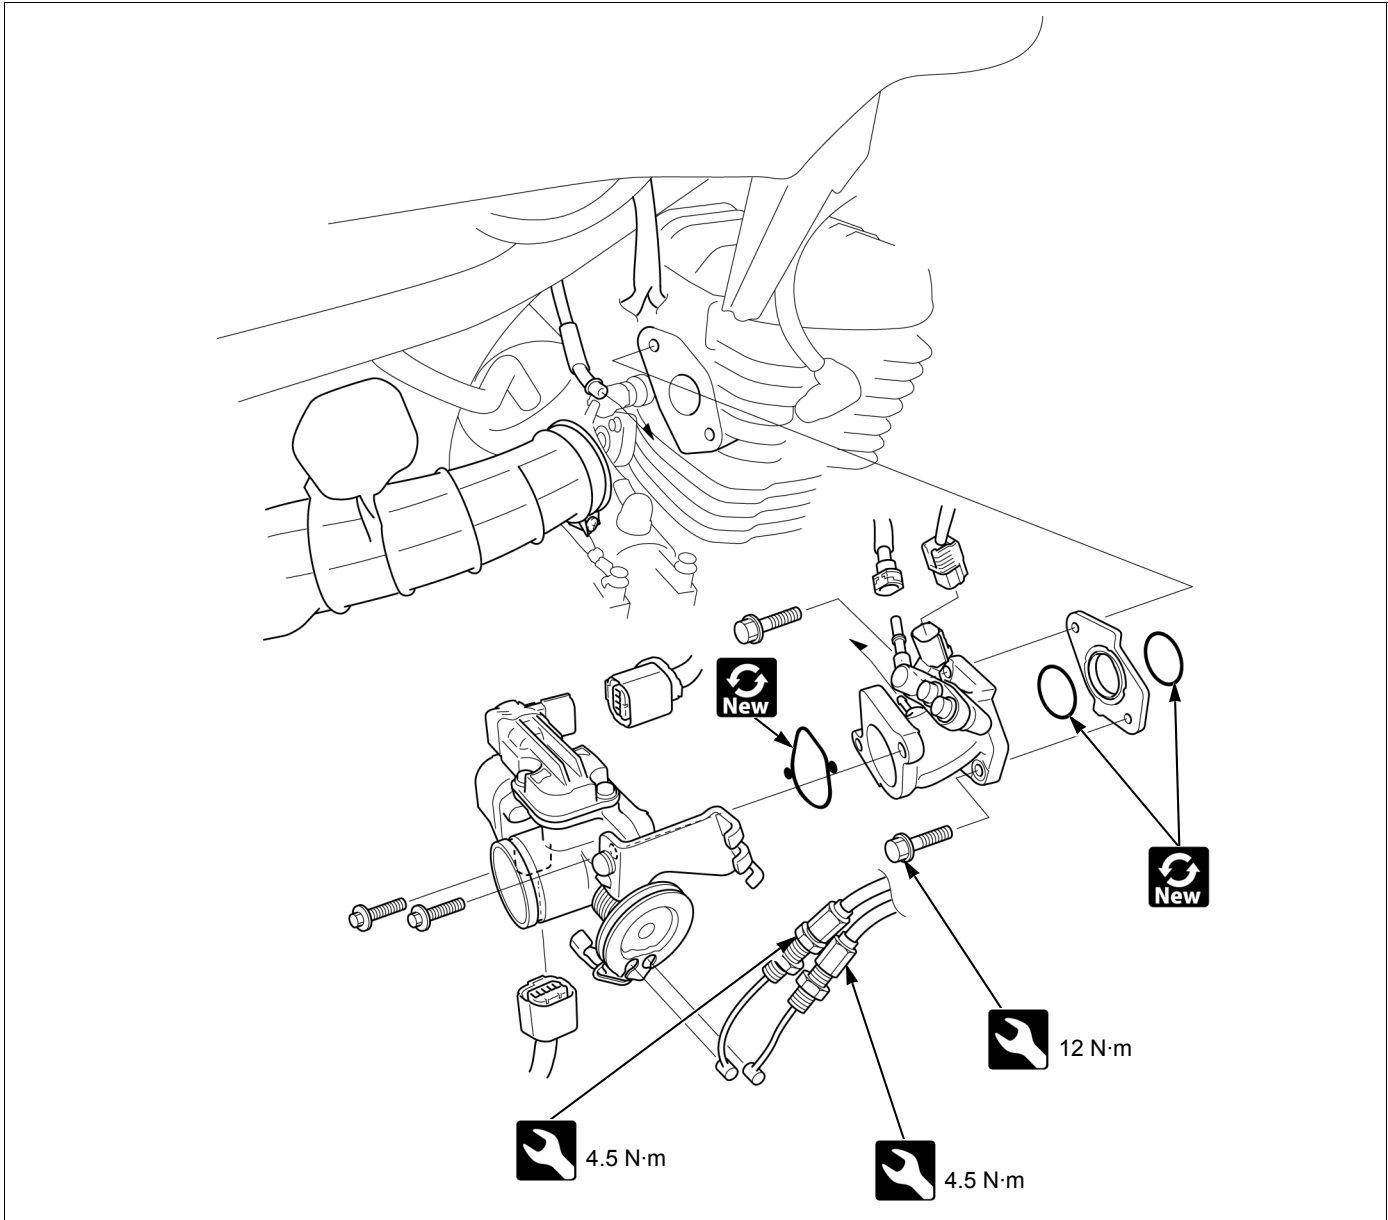

• Quick connect fitting (injector side) →2-2



• If the throttle body is changed, the ECM must be initialized. →2-10



• Throttle body cleaning and inspection

Basic