



- Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive out the bearing from the wheel hub.

Remover head, 17 mm: 07746-0050500

Bearing remover shaft: 07746-0050100



- **1 3** Drive in a new bearing squarely with its sealed side facing outside until it is fully seated.

Driver: 07749-0010000

Attachment, 40 x 42 mm: 07746-0010900

Pilot, 17 mm: 07746-0040400

- **2** Install the distance collar.

- **4** Drive in a new bearing squarely with its marked side facing outside until it is fully seated.

Driver: 07749-0010000

Attachment, 42 x 47 mm: 07746-0010300

Pilot, 20 mm: 07746-0040500

- Wheel disassembly and inspection



Basic