





## O<sub>2</sub> SENSOR

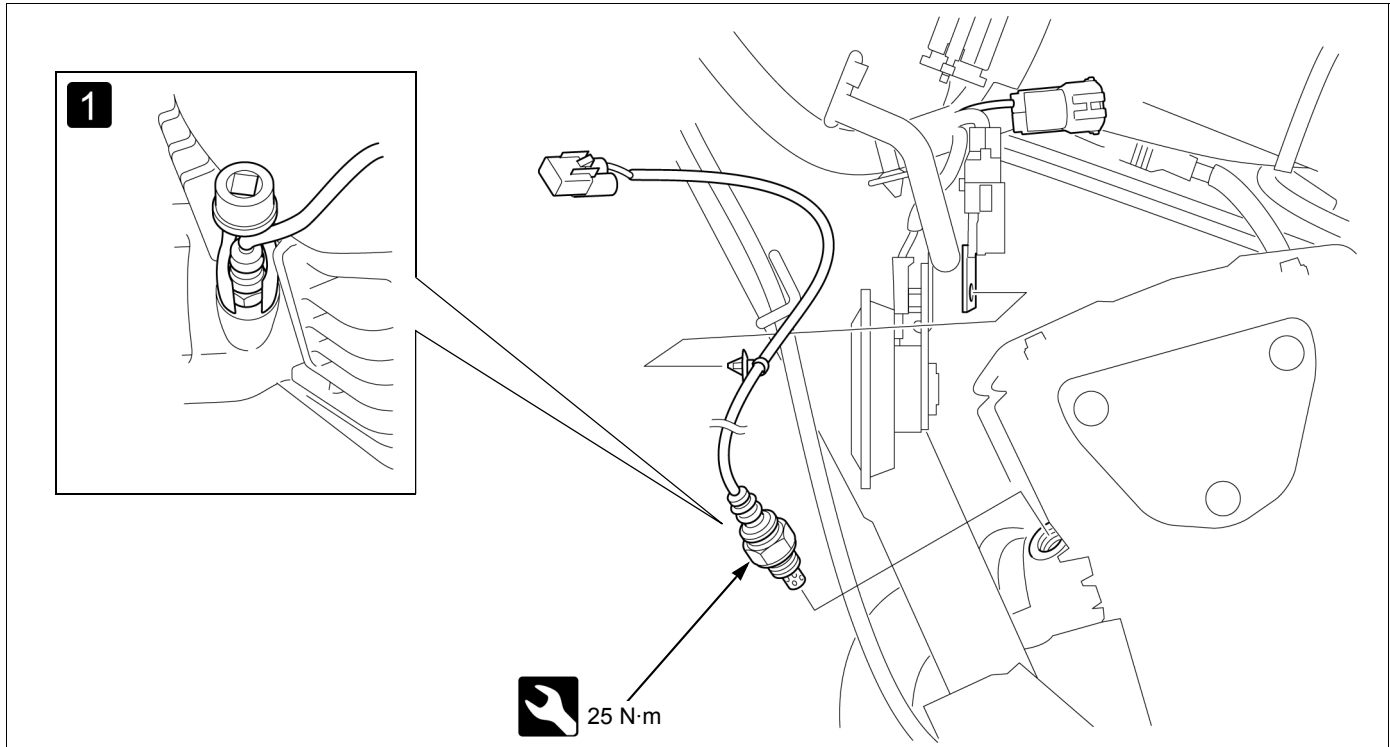

- Fuel tank shroud →3-6
- **1** Remove the O<sub>2</sub> sensor.  
Flare nut socket: FRXM17 (Snap on) or equivalent

## BANK ANGLE SENSOR

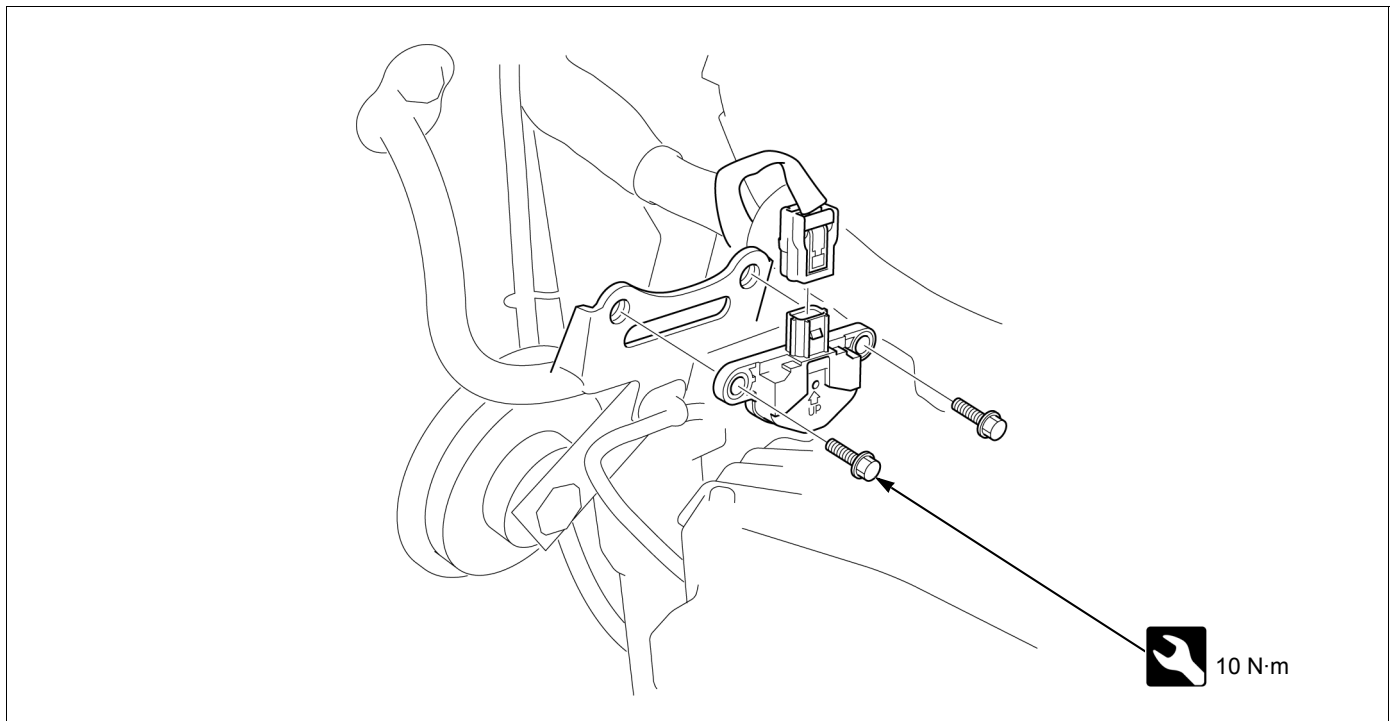

- Fuel tank shroud →3-6
- Bank angle sensor inspection

