


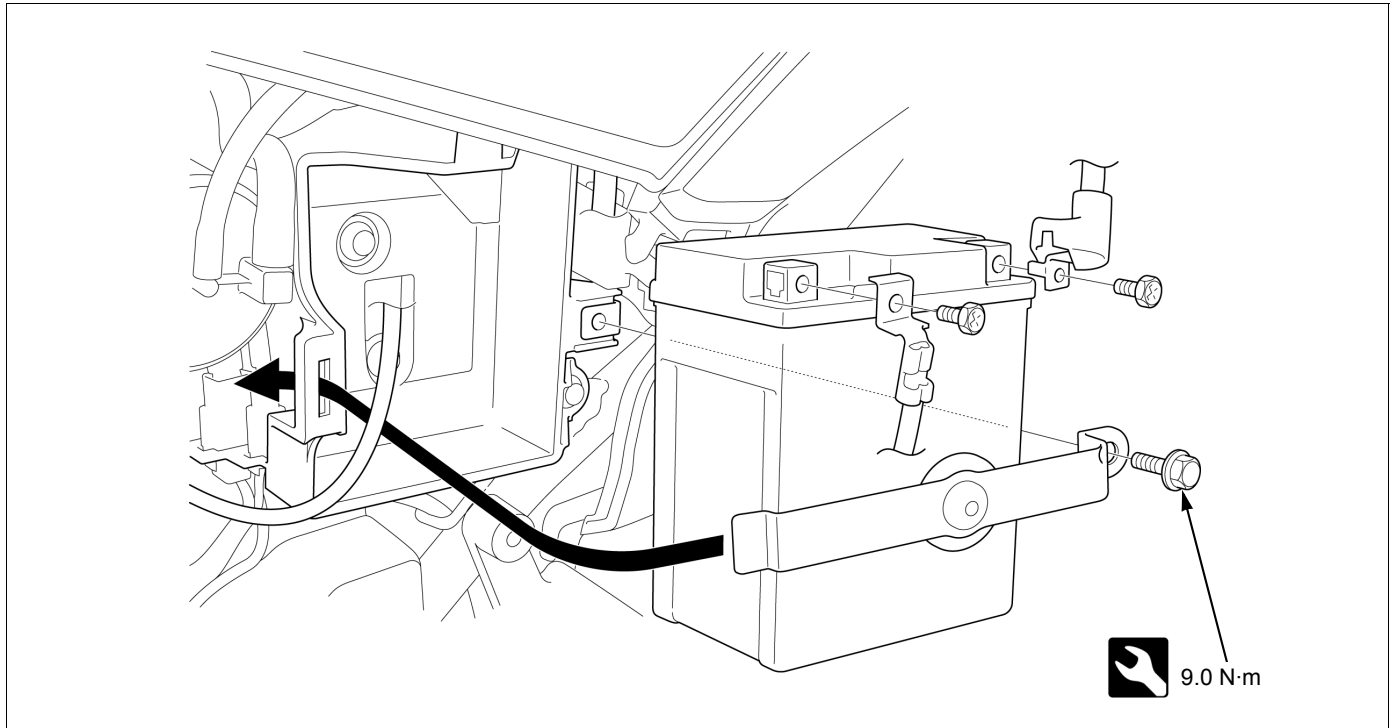


BATTERY



• Left side cover →3-4

LIGHTING SYSTEM

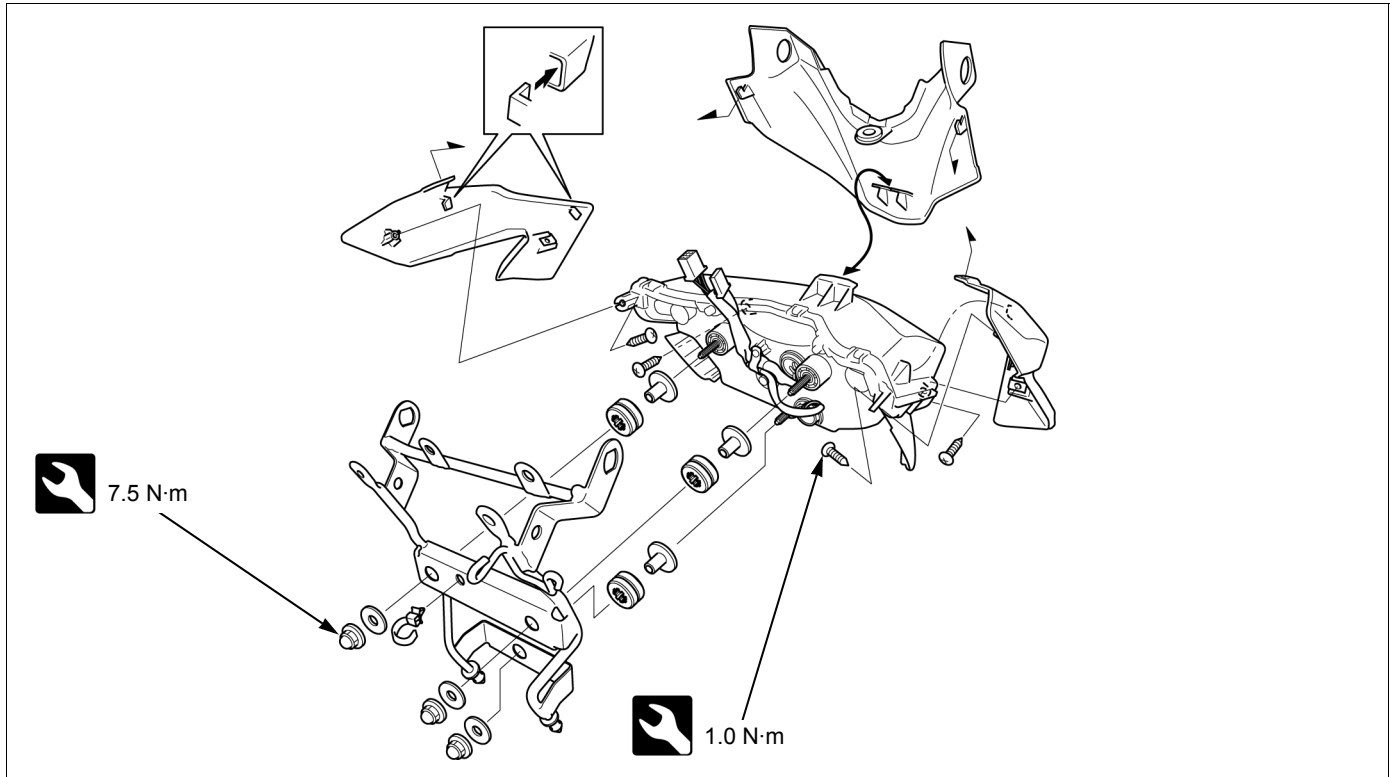

• When LEDs headlight flickering, replace the regulator/rectifier with a known good one, and recheck. If the headlight still flickering, replace the headlight unit.



• Front visor →3-7