




**IT DOES NOT LIGHT UP ALL OF THE LED ON THE RIGHT AND THE LEFT OF THE HANDLEBAR SWITCH**



- Speedometer (Connector connected) →4-34



- Loose or poor contacts of related terminal/connector
- Battery condition
- Burned fuse

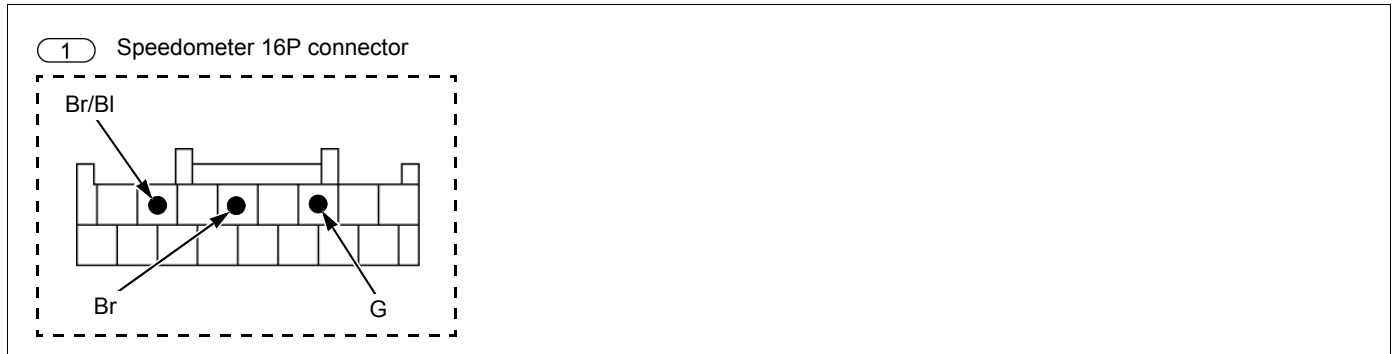

**1. Handlebar Switch LED Circuit Inspection**

- Check an open or short circuit in Br/BI or G wire.
- Is there an open or short circuit?

Yes ▼

No  
▶

- Faulty Br/BI or G wire

**2. Speedometer Input Voltage Inspection**

- Turn the lighting switch ON1 or ON2.
- Connection: Br (+) – G (-)
- Does the battery voltage exist?

Yes ▼

No  
▶

- Faulty Br wire

- Replace the meter with a new one →4-34, and re-check.