






## CLOCK ADJUST

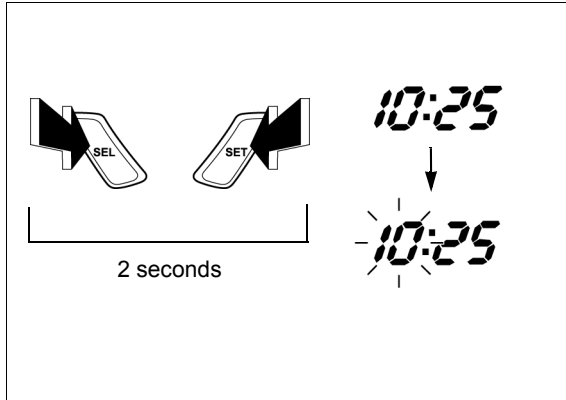


- Push and hold both the SEL button and SET button for more than 2 seconds.
- The clock will be set in the adjust mode with the hour display flashing.

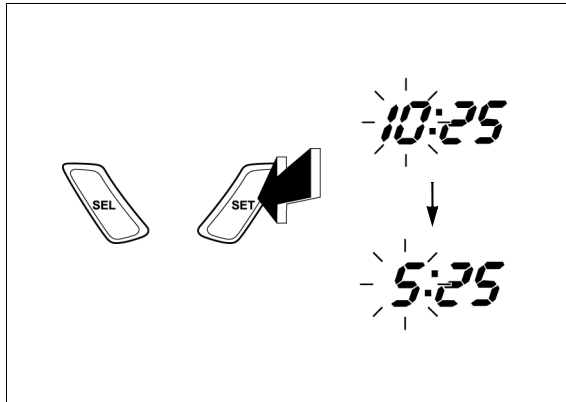

- The time is advanced by one hour, each time the button is pushed.
- The time advances fast when the button is pushed and held.

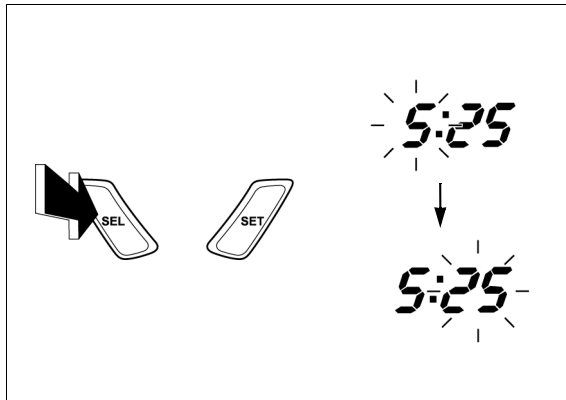

- The minute display will start flashing.

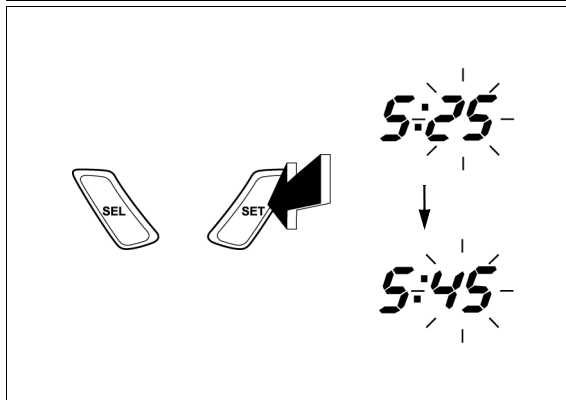

- The time advances by one minute, each time the button is pushed.
- The time advances fast when the button is pushed and held.
- To end the adjustment, push the SEL button or turn the ignition switch to OFF.
- The display will stop flashing automatically and the adjustment will be cancelled if the button is not pushed for about 30 seconds.