

INDEX

A Few Words About Safety	1-2	FUEL PUMP UNIT	2-4
AIR CLEANER	2-7	FUEL TANK	2-6
ALTERNATOR/STARTER CLUTCH	2-25	HANDLEBAR	3-19
BATTERY/CHARGING SYSTEM	4-27	HORN	4-38
BODY PANELS	3-2	How To Use This Manual	1-3
BRAKE FLUID REPLACEMENT	3-25	IGNITION SYSTEM	4-21
CABLE & HARNESS ROUTING	1-15	INJECTOR	2-11
CENTERSTAND	3-13	LIGHTING SYSTEM	4-28
CLUTCH/GEARSHIFT LINKAGE	2-22	LUBRICATION SYSTEM	2-13
CRANKCASE/CRANKSHAFT/BALANCER	2-27	MAINTENANCE SCHEDULE	1-23
CYLINDER HEAD	2-15	MODEL IDENTIFICATION	1-5
CYLINDER/PISTON	2-21	PGM-FI SYSTEM	4-2
ECM INITIALIZATION PROCEDURE	2-10	REAR BRAKE	3-28
ELECTRICAL COMPONENT	4-38	REAR SUSPENSION	3-24
ELECTRICAL STARTER	4-23	REAR WHEEL	3-22
ENGINE OIL CHANGE	2-14	SIDESTAND	3-13
ENGINE OIL LEVEL CHECK	2-13	SPARK PLUG REPLACEMENT	4-22
ENGINE OIL STRAINER SCREEN	2-14	SPECIAL TOOL LIST	1-14
ENGINE UNIT	2-31	SPECIFICATIONS	1-6
EVAP SYSTEM	2-11	SPEEDOMETER	4-34
EXHAUST PIPE/MUFFLER	3-14	STEERING STEM	3-20
FORK	3-17	TECHNICAL FEATURES	1-22
FRONT BRAKE	3-25	THROTTLE BODY	2-8
FRONT WHEEL	3-15	TORQUE VALUE	1-11
FUEL LEVEL SENSOR	4-36	TRANSMISSION	2-29
FUEL LINE	2-2	VALVE CLEARANCE	2-15
