


## Side Cover

### Removal/Installation

Release the clip screw by turning it counterclockwise. Pull the front of the side cover out, then release the boss from the lower fairing rubber grommet. Release the tabs from the seat cowl, then remove the side cover.

Installation is in the reverse order of removal.

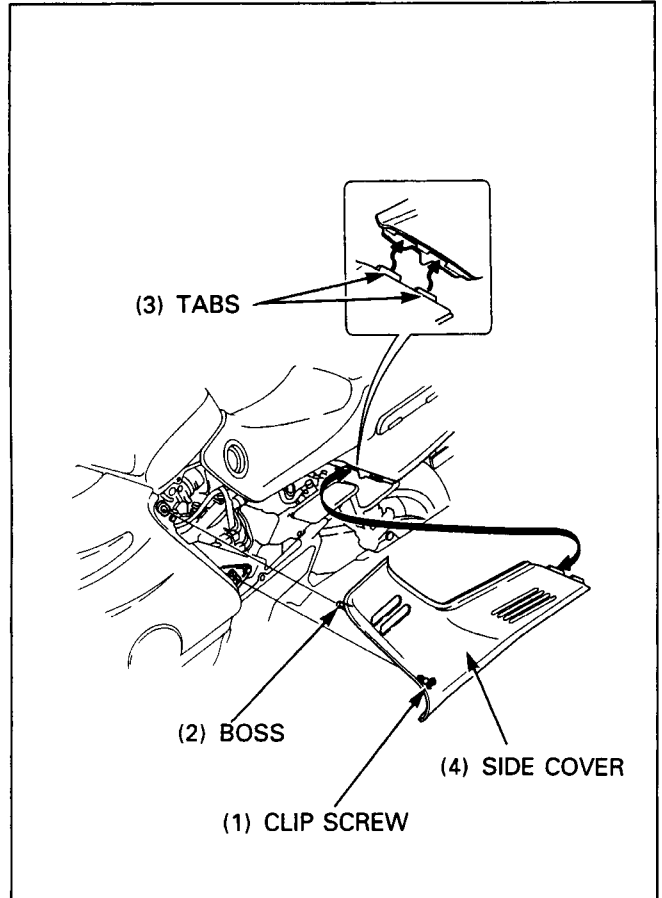

## Seat

### Removal

Unlock the seat using the ignition key. Release the two hooks from the fuel tank.

Pull the seat rearward and remove it.

### Installation

Installation is in the reverse order of removal

#### NOTE

- At installation, first install the front hooks into the fuel tank, then install the middle and rear hooks into the catches of the grab rail.

