

Service Access Guide

- The following shows the locations of the parts that must be removed for the maintenance items listed below. Refer to the Common Service Manual for items not included in this manual.
- Refer to section 2 (Frame/Body Panels /Exhaust System), for the parts that must be removed for service.
For example: Air Cleaner (Contamination, clogging, replacement): Parts
 - Fuel tank ————— The part required must be removed for service.

- (1) Radiator Reserve Tank
• Seat
• Side cover

- (2) Brake Reservoir
(Level check, fluid replacement)
• Seat
• Side cover

- (3) Brake Hose
(Leakage, deterioration, damage)

- (4) Rear Brake Caliper
(Pad wear)

- (9) Brake Light Switch (Operation)

- (10) Brake Pedal (Air in system)

- (11) Oil Filler Cap/Level Gauge
(Level check, replacement)

- (5) Air Cleaner
(Contamination, clogging, replacement; page 3-5)
• Fuel tank

- (6) Throttle Grip (Operation, free play)

- (7) Master Cylinder
(Level check, fluid replacement)

- (8) Brake Lever (Air in system)

- (12) Wheel
(Damage, runout, corrosion)

- (13) Tire
(Wear, damage, air pressure)

- (14) Radiator Filler Cap
(Coolant replacement)
• Right inner cover

- (15) Secondary Air Supply System
(SW, AR type only; Air leaks, deterioration, damage)
• Lower fairing

- (16) Oil Filter (Replacement)
• Lower fairing

