

NOTE

- Note the location and direction of the caliper pistons, dust seals and piston seals.
- Replace the caliper piston seals and dust seals as a set.

Requisite Service

- Left front brake caliper removal/installation (page 13-6)
- Right front brake caliper removal/installation (page 13-8)

Procedure		Qty	Remarks
	Disassembly Order		Assembly is in the reverse order of disassembly.
(1)	Caliper bracket	1	
(2)	Brake pad spring	1	
(3)	Brake pad retainer	1	
(4)	Caliper body B mounting bolt	3	
(5)	Retainer	1	
(6)	Caliper body B	1	
(7)	Caliper piston (O.D. 27.0 mm)	1	
(8)	Dust seal	1	Apply silicone grease to the new dust seals.
(9)	Piston seal	1	
(10)	Caliper piston (O.D. 22.6 mm)	1	
(11)	Dust seal	1	
(12)	Piston seal	1	
(13)	Caliper piston (O.D. 25.4 mm)	1	
(14)	Dust seal	1	
(15)	Piston seal	1	
(16)	Bracket pin boot	1	
(17)	Bracket pin bolt	1	
(18)	Caliper pin boot	1	
(19)	Caliper pin bolt	1	