


FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the two trim clips between the right and left lower cowls.

Remove the trim clip from the rear end of the left lower cowl.

Remove the special bolts.

Release the boss from the inner half cowl, then separate and remove the right and left lower cowls.

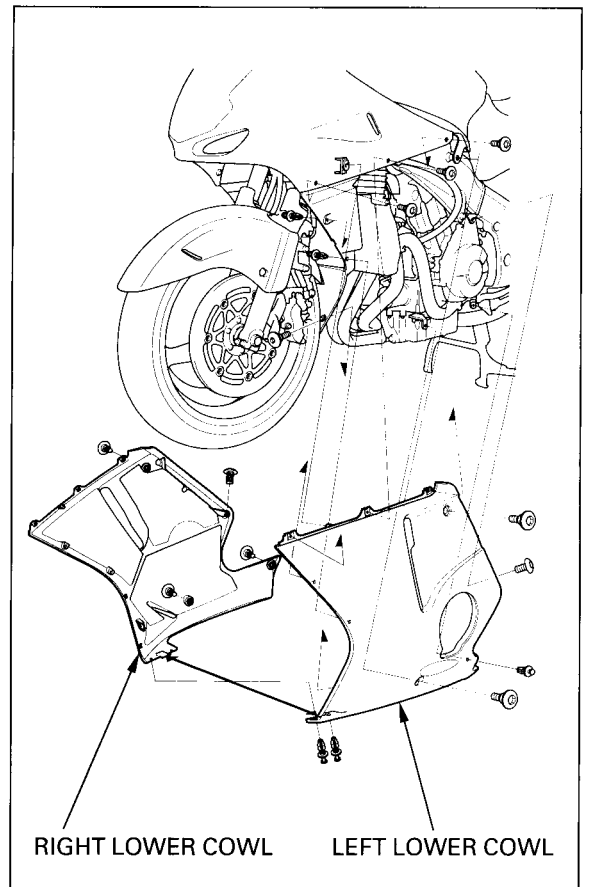

Remove the two trim clips and inner half cowl.

