


MAINTENANCE

After staking, check the staked area of the master link for cracks.
If there is any cracking, replace the master link, O-rings and plate.

CAUTION:

A drive chain with a clip-type master link must not be used.

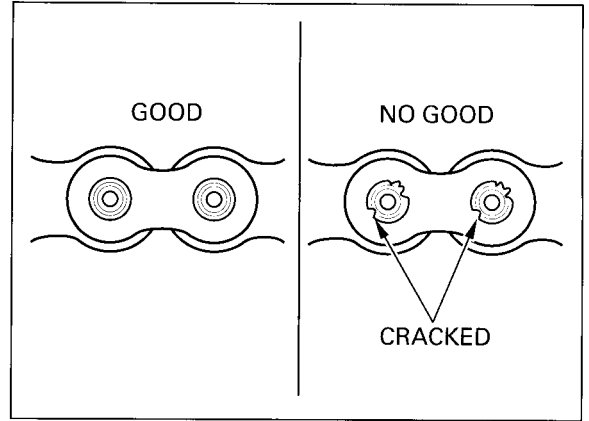

DRIVE CHAIN SLIDER


Remove the bolts and clutch slave cylinder.

NOTE:

Before removing the clutch slave cylinder, squeeze the clutch lever fully and clamp it.



Remove the bolts and drive sprocket cover and guide plate.

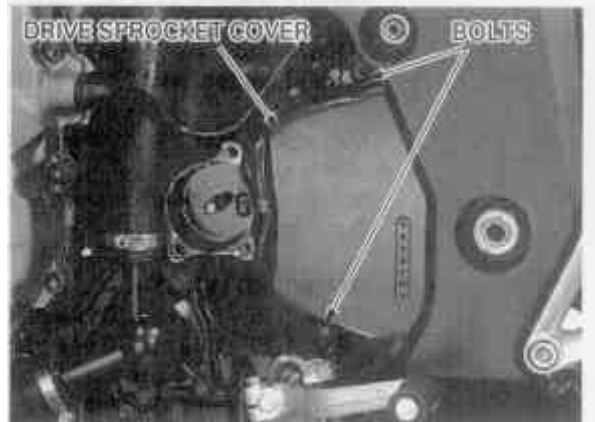

Inspect the drive chain slider for excessive wear or damage.
If it is worn to the wear indicator, replace the drive chain slider.

