TORQUE VALUES

ECT (Engine Coolant Temperature)/thermo sensor

Knock sensor

Throttle body insulator band screw

Throttle cable bracket mounting screw

Fuel pipe mounting nut Fuel pipe setting bolt

Pressure relief valve lock nut

Starter valve synchronization plate screw

Starter valve lock nut Wax unit mounting screw

Wax unit link bracket screw

Vacuum joint plug socket bolt for synchronization

Fuel tube sealing nut (throttle body side)

Fuel tube banjo bolt (fuel tank side)

Service check bolt

Fuel pump mounting nut

Fuel filler cap bolt

Cam pulse generator cover SH bolt

TOOLS

Peak voltage adaptor

ECU test harness Test pin box

TROUBLESHOOTING

Engine won't to start

• Intake air leak

- Fuel contaminated/deteriorated
- Pinched or clogged fuel tube
- Faulty fuel pump
- Clogged fuel filter
- Clogged fuel injector filter
- Sticking fuel injector needle
- Faulty fuel pump operating system

Engine stall, hard to start, rough idling

- Intake air leak
- Fuel contaminated/deteriorated
- Pinched or clogged fuel tube
- Idle speed misadjusted
- Starter valve synchronization misadjusted

10 N·m (1.0 kgf·m, 7 lbf·ft) 31 N·m (3.2 kgf·m, 23 lbf·ft)

See page 1-15

3 N·m (0.35 kgf·m, 2.5 lbf·ft)

10 N·m (1.0 kgf·m , 7 lbf·ft)

22 N·m (2.2 kgf·m, 16 lbf·ft) 27 N·m (2.8 kgf·m, 20 lbf·ft)

1 N·m (0.09 kgf·m, 0.7 lbf·ft)

2 N·m (0.18 kgf·m, 1.3 lbf·ft)

5 N·m (0.5 kgf·m, 3.6 lbf·ft) 1 N·m (0.09 kgf·m, 0.7 lbf·ft)

3 N·m (0.3 kgf·m, 2.2 lbf·ft)

22 N·m (2.2 kgf·m, 16 lbf·ft)

22 N·m (2.2 kgf·m, 16 lbf·ft)

15 N·m (1.5 kgf·m, 11 lbf·ft) 12 N·m (1.2 kgf·m, 9 lbf·ft)

2 N·m (0.2 kgf·m , 1.4 lbf·ft)

12 N·m (1.2 kgf·m, 9 lbf·ft)

U-nut, Yellow paint

Yellow paint Yellow paint

White paint

See page 5-51 for tightening sequence

07HGJ-0020100 with

Commercially available digital multimeter (impedance 10 M \Omega/DCV

minimum)

07WMZ-MBG0100 07WGZ-0010100

Backfiring or misfiring during acceleration

• Ignition system malfunction

Poor performance (driveability) and poor fuel economy

- Pinched or clogged fuel tube
- Faulty pressure regulator