

FUEL SYSTEM (Programmed Fuel Injection)

Connect the ohmmeter to the fuel cut relay connector terminals.


CONNECTION: Black/White – Brown

Connect the 12V battery to the following fuel cut relay connector terminals.

CONNECTION: Brown/Black – Black/White

There should be continuity only when the 12V battery is connected.

If there is no continuity when the 12V battery is connected, replace the fuel cut relay.

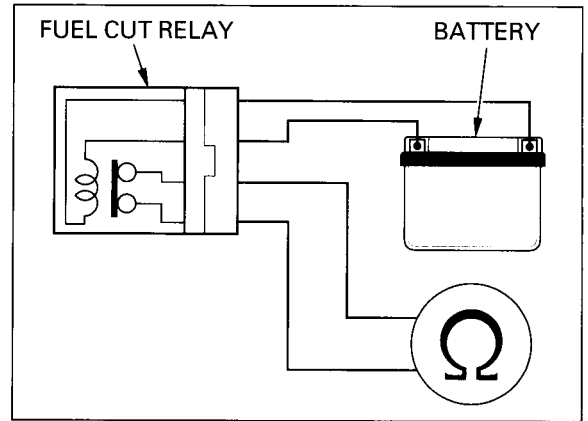

FUEL TANK

REMOVAL

Disconnect the fuel level/reserve sensor 3P (Black) connector.



Support the rear end of the fuel tank (page 5-47).
Release the fuel pressure (page 5-47).

Disconnect the fuel pump 2P (Brown) connector.



Disconnect the fuel tank air vent tube and overflow tube.

