

REAR WHEEL


REMOVAL

Support the motorcycle on its center stand.

SD type only: Remove the screws, nuts, collars and mud guard.



Remove the axle nut and washer.

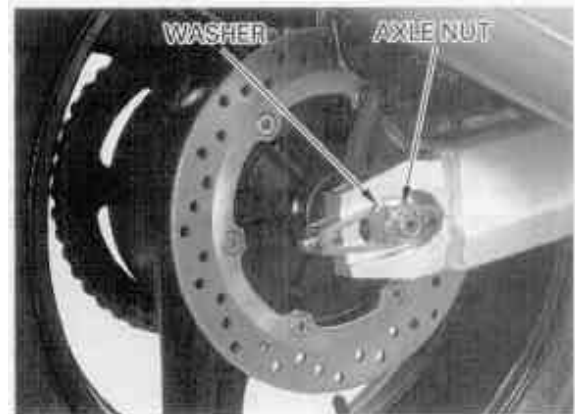

Push the rear wheel forward.
Derail the drive chain from the driven sprocket.

Remove the axle from the left side and remove the rear wheel.



Remove the side collars.

