

REAR WHEEL/SUSPENSION


Remove the swingarm pivot lock nut while holding the pivot bolt.

TOOL:

Pivot adjusting wrench 07908-4690003



Loosen the swingarm adjusting bolt by turning the pivot bolt.
Remove the pivot bolt and swingarm.

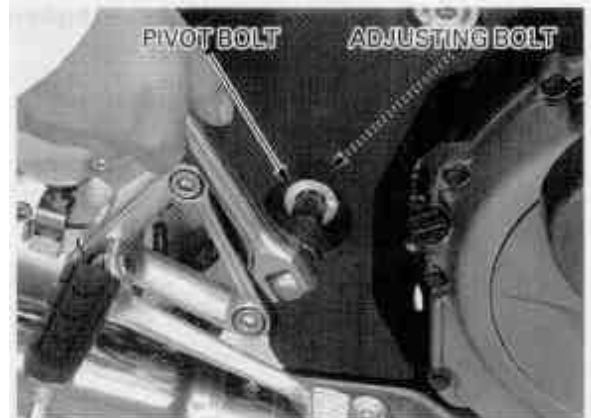


DISASSEMBLY/INSPECTION

Remove the following:

- Drive chain slider
- Drive chain adjusters

Check the drive chain slider for wear or damage.

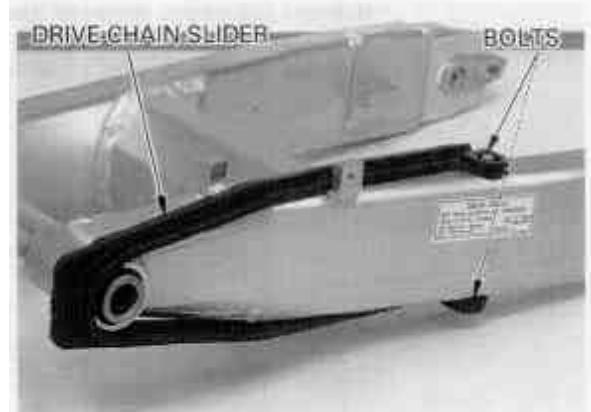

Remove the pivot collar B and dust seals from the swingarm pivot.

Check the dust seals and collar for damage or fatigue.

