

HANDLEBAR SWITCHES

Disconnect the handlebar switch connectors.

Check for continuity between the wire terminals of the handlebar switch connector.

Continuity should exist between the color coded wire terminals as follows:

ENGINE STOP SWITCH


	IG	BAT2
OFF		
RUN	○ — ○	
COLOR	BI	W/BI

STARTER SWITCH (Except U type)

	ST	IG
FREE		
PUSH	○ — ○	
COLOR	Y/R	BI

STARTER SWITCH (U type)

	ST	IG	BAT3	HL
FREE			○ — ○	
PUSH	○ — ○			
COLOR	BI	W/BI	BI/Br	Bu/W

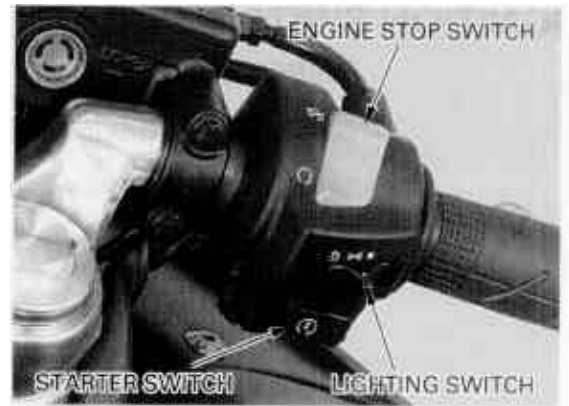

LIGHTING SWITCH (Except U type)

	BAT3	TL	BAT4	HL
•				
P	○ — ○	○ — ○		
H	○ — ○	○ — ○	○ — ○	
COLOR	Br/Bu	Br/W	BI/R	Bu/W

TURN SIGNAL SWITCH


	W	R	L
R	○ — ○		
N			
L	○ — ○		○ — ○
COLOR	GR	SB	O

PASSING SWITCH

	BAT	Hi
FREE		
PUSH	○ — ○	
COLOR	BI/R	•

DIMMER SWITCH

	HL	Lo	HI
Lo	○ — ○		
(N)	○ — ○ — ○		
Hi	○ — ○		○ — ○
COLOR	•	W	Bu •

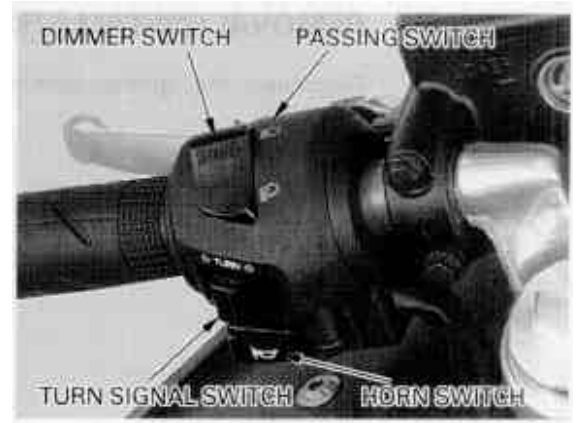

HORN SWITCH

	Ho	BAT3
FREE		
PUSH	○ — ○	
COLOR	Lg	BI/Br