


IMMOBILIZER SYSTEM (Except U, BR type)



Immobilizer indicator remains on with the ignition switch ON

- Check that there is any metal obstruction or the other vehicle's transponder key near the immobilizer receiver and key. If so, remove it and recheck.

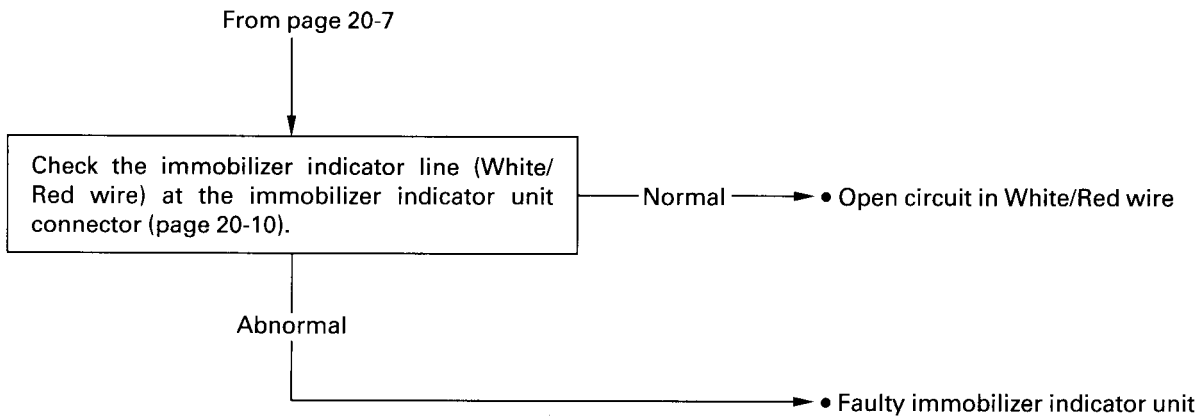