


BRAKE PEDAL HEIGHT ADJUSTMENT

Loosen the lock nut and turn the push rod until the correct pedal height is obtained.

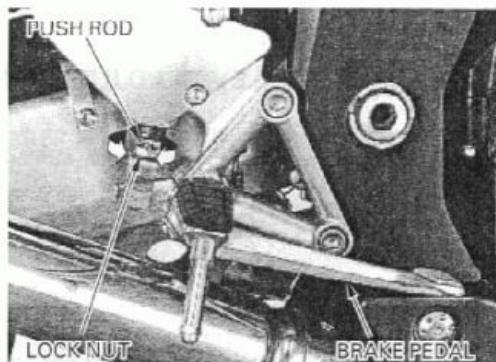

BRAKE LIGHT SWITCH

NOTE:

The front brake light switch does not require adjustment.

Adjust the brake light switch so the brake light comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the switch so the light comes on at the proper time.

Hold the switch body and turn the adjuster. Do not turn the switch body.



HEADLIGHT AIM

An improperly adjusted headlight may blind on-coming drivers, or it may fail to light the road for a safe distance.

Place the motorcycle on a level surface.

Adjust the headlight beam vertically by turning the vertical beam adjusting screws.


A clockwise rotation moves the beam up.

Horizontally beam adjustment are made using the horizontal beam adjusting screws.

A clockwise rotation moves the beam toward the right side of the rider.

Adjust the headlight beam as specified by local laws and regulations.

HEADLIGHT BEAM ADJUSTER

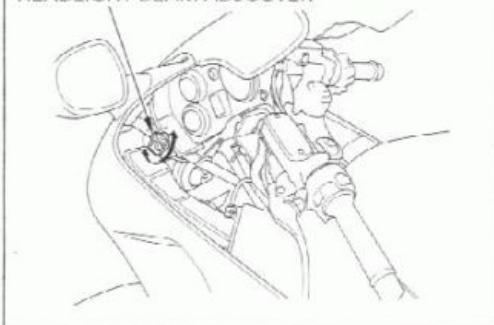

VERTICAL BEAM ADJUSTER

