


Measure the voltage between the terminals of the wire harness side.

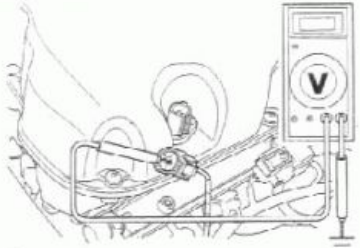

Connection:
Gray/blue (+) — Ground (-)


Standard: 4.75 — 5.25 V

Out of range →

- Open or short circuit in Gray/blue wire.
- Loose or poor contact on the ECM connectors.

Correct

Measure the voltage between the terminals of the wire harness side.



Connection:
Gray/blue (+) — Green/orange (-)

Standard: 4.75 — 5.25 V

Out of range →

- Open or short circuit in Green/orange wire.
- Loose or poor contact on the ECM connectors.

Correct →

- Replace the ECM with a new one, and inspect it again.