


PGM-FI MALFUNCTION INDICATOR 11 BLINKS (VEHICLE SPEED SENSOR)

Turn the ignition switch to "OFF".

Disconnect the vehicle speed sensor 3P connector.
Check for loose or poor contact on the vehicle speed sensor connector.

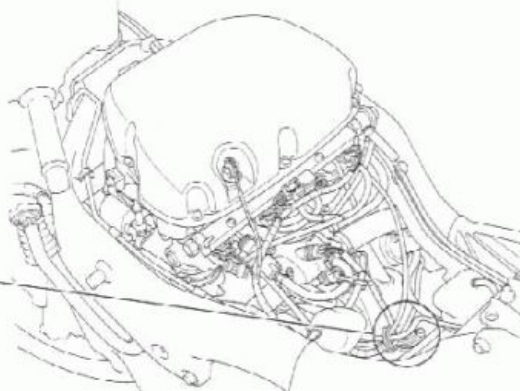

Connect the vehicle speed sensor 3P connector.
Start the engine.
With the side stand up and keep the engine rev more than 5,000 rpm about 20 seconds or more.
Check that the malfunction indicator blinks.

Does not blink

• Loose or poor contacts on the vehicle speed sensor connector.


11 blinks

Turn the ignition switch to "OFF".

Disconnect the vehicle speed sensor 3P connector.
Turn the ignition switch to "ON".
Measure the voltage at the wire harness side connector.

Out of range

• Open or short circuit in Black/brown wire.

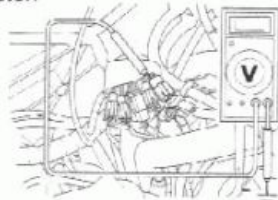

Connection: Black/brown (+) Ground (-)
Standard: 12 V

Correct