

FUEL LINE INSPECTION

FUEL PRESSURE INSPECTION

▲WARNING

- Gasoline is extremely flammable and is explosive under certain conditions.
- Be sure to relieve fuel pressure while the engine is off.
- If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.

CAUTION:

- Before disconnecting fuel tubes, release the fuel pressure by loosening the service check bolt at the fuel tank.
- Always replace the sealing washer when the service check bolt is removed or loosened.

Remove the seat (page 2-2).

Disconnect the battery negative cable from the battery terminal.

Remove the fuel tank mounting bolts.

Release the inner panel bosses from the fuel tank (page 3-6).

Lift the tank slowly, being careful not to overextend the fuel hose.

Lift the rear end of the fuel tank and support it using the equipped tools (rear axle wrench and extension) as shown.

Disconnect the pressure regulator vacuum hose and plug the vacuum hose.

