


INSTALLATION

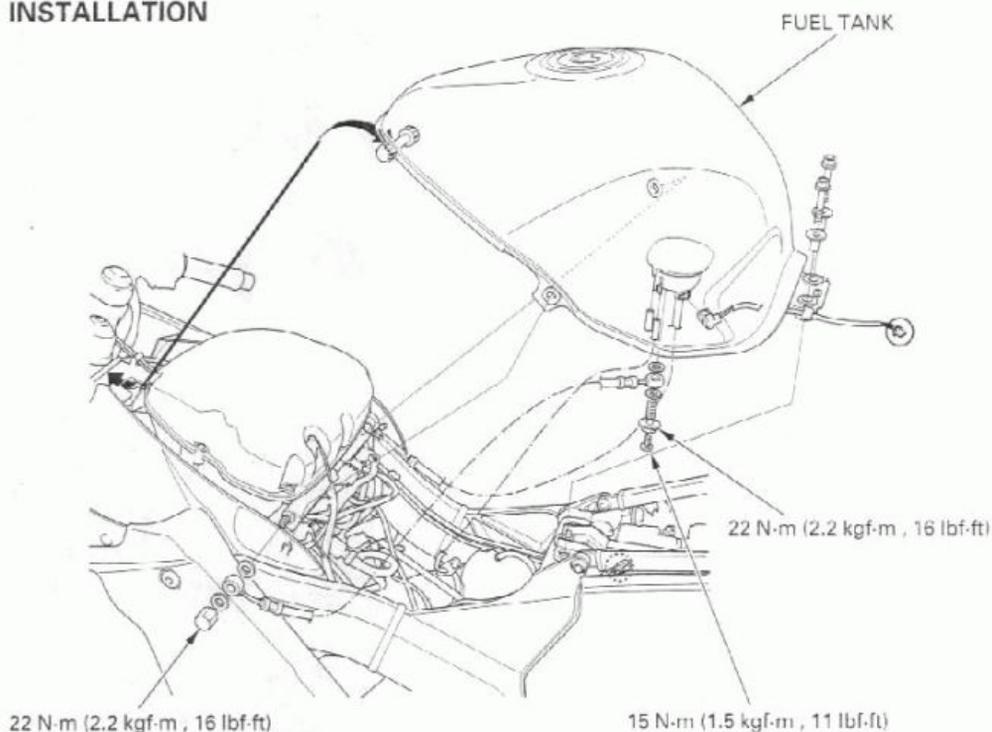

Connect the fuel hose to the fuel pump with new sealing washers.

**NOTE:**

Align the fuel hose eyelet joint with the stopper on the fuel pump.

Install and tighten the fuel hose banjo bolt to the specified torque.

**TORQUE:** 22 N-m (2.2 kgf-m, 16 lbf-ft)

Connect the fuel return hose to the fuel pump.

Install the fuel tank front bracket into the frame.

**CAUTION:**

*Be careful not to damage the throttle cables.*

Support the rear end of the fuel tank (page 5-55).

