

THROTTLE BODY

▲WARNING

- Gasoline is extremely flammable and is explosive under certain conditions.
- Be sure to relieve fuel pressure while the engine is off.

CAUTION:

- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.
- Before disconnecting the fuel hose, release the fuel pressure by loosening the service check bolt.
- Always replace the sealing washer when the service check bolt is removed or loosened.

REMOVAL ('99)

Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.

Remove the following:

- Fuel tank (page 5-61)
- Air cleaner housing (page 5-65)



Remove the throttle stop screw from the guide.

Remove the throttle cable guide bracket mounting bolts.

Disconnect the throttle cable ends from the throttle drum.

California type only:

Disconnect the EVAP purge control solenoid valve hose from the throttle body vacuum tube 5-way joint.

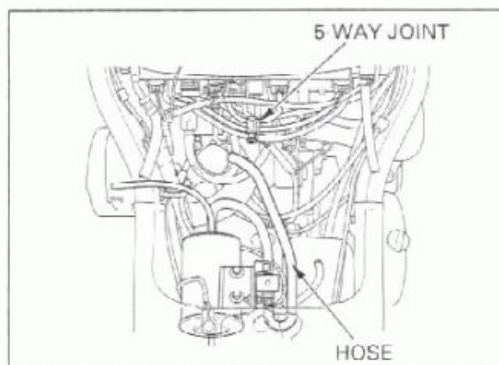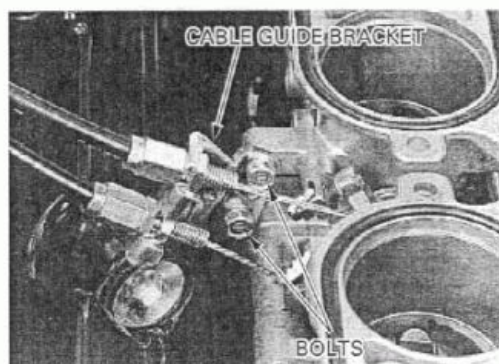

Disconnect the No. 1/3 ignition coil primary wires.

Disconnect the TP sensor connector.

