



REMOVAL

Remove the throttle body (page 5-68).


Disconnect the MAP sensor vacuum hose.
Remove the screw and MAP sensor.

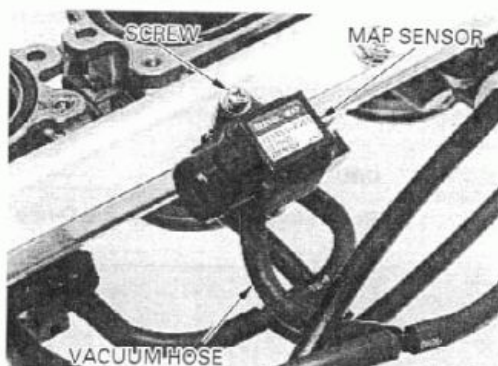

Remove the nuts and fuel pipe assembly.

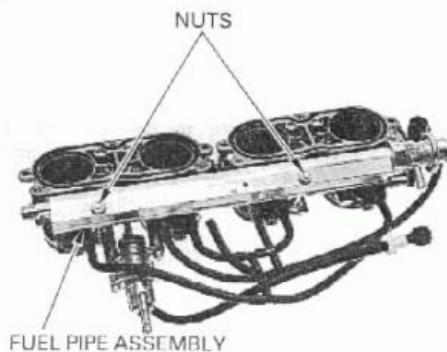

Remove the injectors from the throttle body.

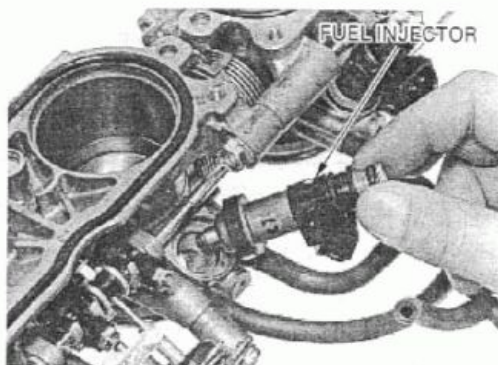

Remove the seal ring, O-ring and cushion ring.

