


## FUEL SYSTEM (Programmed Fuel Injection)

Remove the starter valve arm screws and starter valve arms.




Loosen the lock nuts and remove the starter valve assembly.

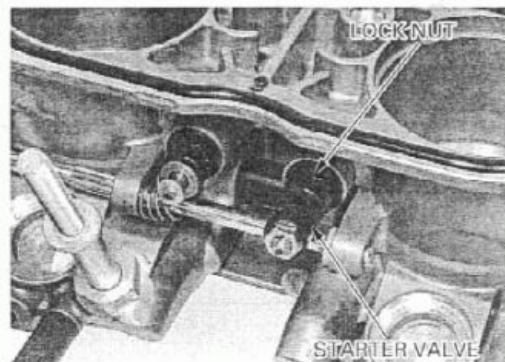

Clean the starter valve bypass using compressed air.

**CAUTION:**

*Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.*

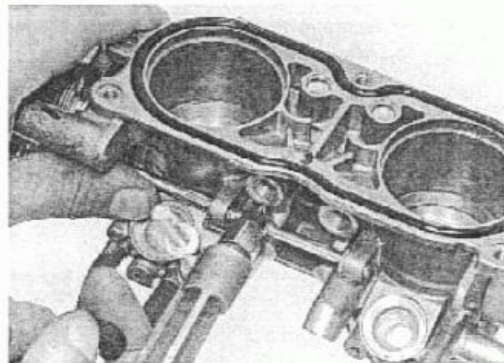

Remove the wax unit link bracket screw.

