

## COOLING SYSTEM

Remove the following:


- Seat (page 2-2)
- Lower cowl (page 2-3)

Disconnect the siphon hose from the radiator.


Drain the reserve tank coolant.

Empty the coolant and rinse the inside of the reserve tank with water.

Reinstall the radiator siphon hose.

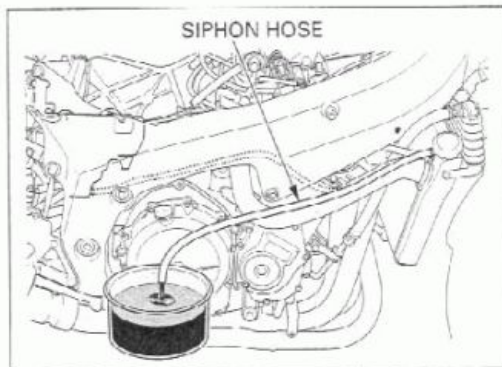

Fill the system with the recommended coolant through the filler opening up to filler neck.

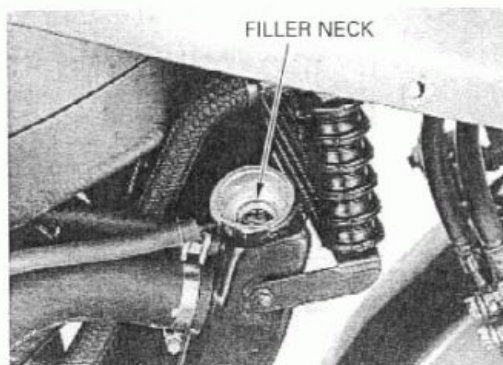

Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.

Bleed air from the system as follow:

1. Shift the transmission into neutral. Start the engine and let it idle for 2-3 minutes.
2. Snap the throttle 3-4 times to bleed air from the system.
3. Stop the engine and add coolant up to the proper level if necessary. Reinstall the radiator cap.
4. Check the level of coolant in the reserve tank and fill to the upper level if it is low.



## THERMOSTAT

### REMOVAL

Drain the coolant (page 6-5).

Support the front end of the fuel tank (page 3-6).

Remove the lower cowl (page 2-3).

Remove the bolts and thermostat housing cover.

