



Remove the socket bolts and side stand bracket assembly.

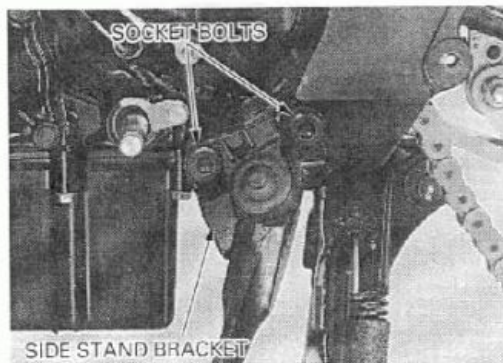


Remove the rear/upper and rear/lower engine hanger nuts.

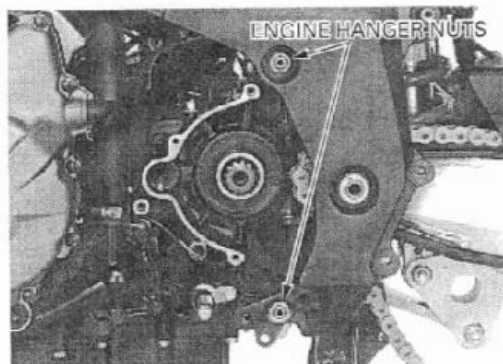

Loosen the rear/upper engine hanger adjusting bolt lock nut while holding the adjusting bolt using the special tool.

TOOL:
Lock nut wrench

07VMA-MAT0100 or
07VMA-MAT010A
(U.S.A. only)

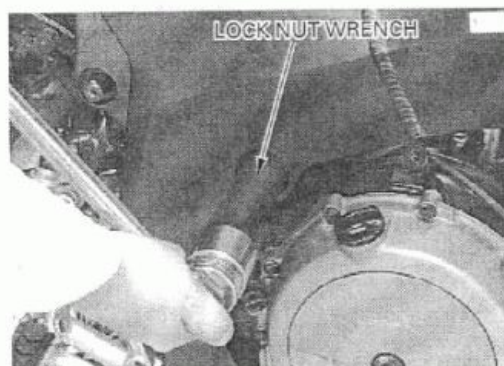

Turn the adjusting bolt with the engine hanger bolt counterclockwise to release the adjusting bolt from the engine.

