


Hold the rear/lower engine hanger adjusting bolt and tighten the adjusting bolt lock nut to the specified torque using the special tool.

**TOOL:**

Lock nut wrench                    07VMA-MAT0100 or  
   07VMA-MAT010A  
   (U.S.A. only)

**TORQUE** : 54 N·m (5.5 kgf·m , 40 lbf·ft)

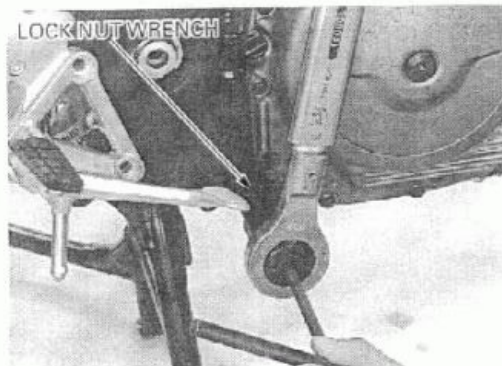


Hold the rear/upper engine hanger adjusting bolt and tighten the adjusting bolt lock nut to the specified torque using the special tool.

**TOOL:**


Lock nut wrench                    07VMA MAT0100 or  
   07VMA-MAT010A  
   (U.S.A. only)

**TORQUE** : 54 N·m (5.5 kgf·m , 40 lbf·ft)

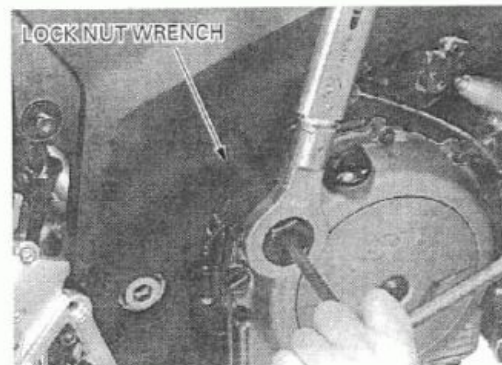

Install the rear/lower and rear/upper engine hanger nuts to the specified torque.

**TORQUE** : 64 N·m (6.5 kgf·m , 47 lbf·ft)

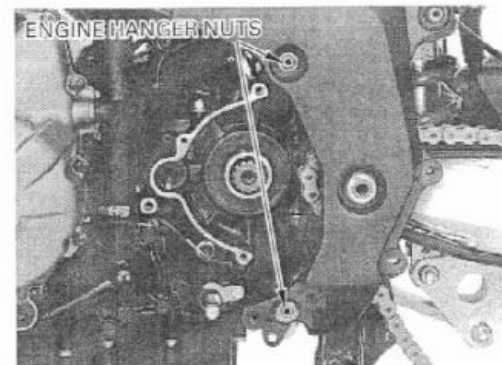

Tighten front/right and front/left engine hanger bolts to the specified torque.

**TORQUE** : 40 N·m (4.1 kgf·m , 30 lbf·ft)

