

8. CYLINDER HEAD/VALVES

SERVICE INFORMATION	8-1	VALVE GUIDE REPLACEMENT	8-16
TROUBLESHOOTING	8-3	VALVE SEAT INSPECTION/REFACING	8-17
CYLINDER COMPRESSION TEST	8-4	CYLINDER HEAD ASSEMBLY	8-20
CYLINDER HEAD COVER REMOVAL	8-5	CYLINDER HEAD INSTALLATION	8-21
CYLINDER HEAD COVER DISASSEMBLY	8-6	CAMSHAFT INSTALLATION	8-23
CAMSHAFT REMOVAL	8-7	CYLINDER HEAD COVER ASSEMBLY	8-27
CYLINDER HEAD REMOVAL	8-11	CYLINDER HEAD COVER INSTALLATION	8-27
CYLINDER HEAD DISASSEMBLY	8-13	CAM CHAIN TENSIONER LIFTER	8-30
CYLINDER HEAD INSPECTION	8-14		

SERVICE INFORMATION

GENERAL

- This section covers service of the cylinder head, valves and camshaft.
- The camshaft services can be done with the engine installed in the frame. The cylinder head service required engine removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft lubricating oil is fed through oil passages in the cylinder head. Clean the oil passages before assembling the cylinder head.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head.