


## CYLINDER HEAD/VALVES

Remove the stopper tool from the cam chain tensioner lifter.


STOPPER TOOL

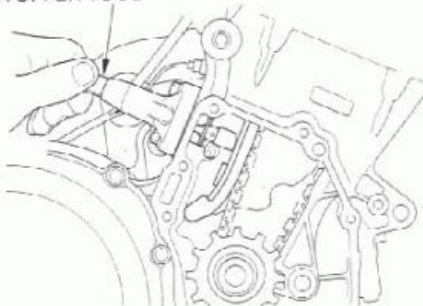

Install a new sealing washer and tighten the sealing bolt.

Recheck the valve timing.

BOLT CAM CHAIN TENSIONER LIFTER

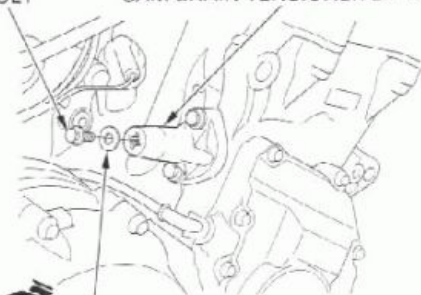


SEALING WASHER

Install the new gasket onto the cam pulse generator cover.

Install the cam pulse generator cover aligning its dowel pins with the hole in the cylinder head.

DOWEL PINS

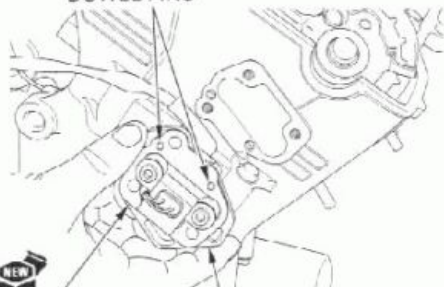


GASKET

CAM PULSE GENERATOR COVER

Install the new sealing washers and bolts, then tighten the bolts to the specified torque.

**TORQUE:** 12 N·m (1.2 kgf·m, 9 lbf·ft)

CAM PULSE GENERATOR COVER

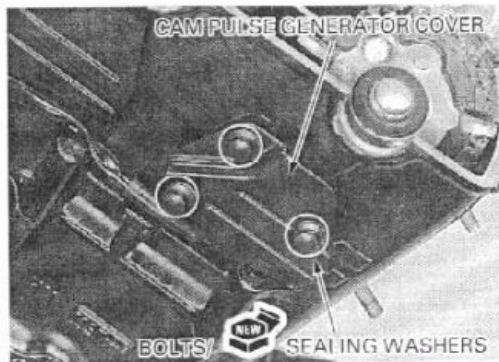

BOLTS

SEALING WASHERS