

## ALTERNATOR COVER REMOVAL

Remove the following:

- Lower cowl (page 2-3)
- Seat (page 2-2)
- Seat cowl (page 2-2)

Disconnect the alternator 3P white connector.




Remove the alternator cover SH bolts and alternator cover.

### CAUTION:


*The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.*

### NOTE:

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.

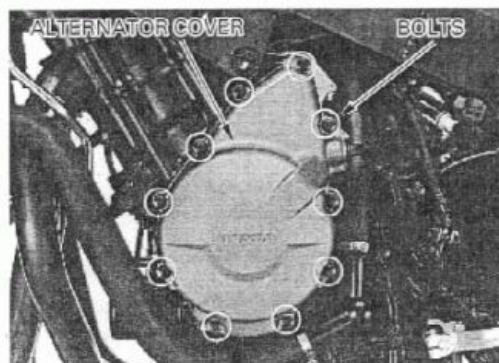

Remove the gasket and dowel pin.

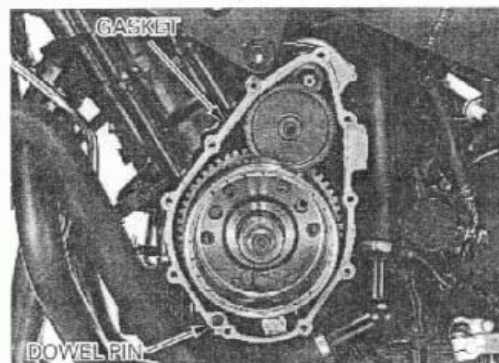

## STATOR

### REMOVAL

Remove the alternator wire grommet from the alternator cover.

Remove the socket bolt and stator wire holder.  
Remove the socket bolts and stator.

