


STARTER CLUTCH

INSPECTION

Check the operation of the one-way clutch by turning the driven gear.

You should be able to turn the driven gear counterclockwise smoothly, but the gear should not turn clockwise.

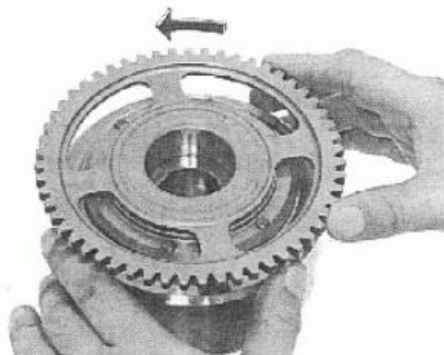

DISASSEMBLY


Remove the starter driven gear by turning it counterclockwise.

Hold the flywheel with a flywheel holder, and remove the starter clutch mounting torx bolts.

TOOL:

Flywheel holder 07725-0040000
(Equivalent commercially available in U.S.A.)


Remove the starter one-way clutch assembly.

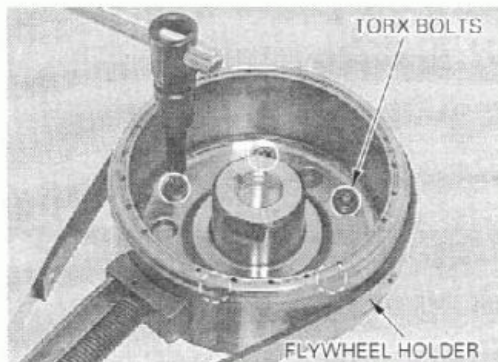

Check the starter driven gear for abnormal wear or damage.

Measure the starter driven gear boss O.D.

SERVICE LIMIT: 51.684 mm (2.0348 in)

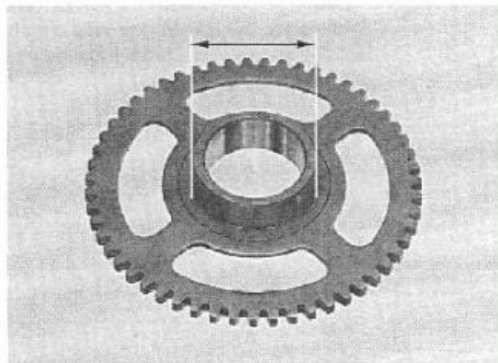

Check the one-way clutch for wear or damage and replace if necessary.

