FORK


REMOVAL

Remove the front wheel (page 13-9).


CAUTION:

Keep the brake and clutch master cylinders upright.

For the left fork leg removal, remove the brake hose clamp bolt.

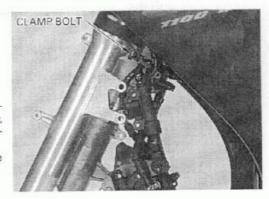

It is not necessary to remove the oil bolts and oil pipe from the dalay valve. For the right fork leg removal, remove the brake pipe 3 way joint mounting bolt, then the delay valve mounting bolts and reflector.

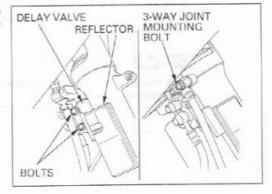

Remove the handlebar stop ring. Loosen the handlebar pinch bolts.

When the fork leg will be disassembled, loosen the fork cap, but do not remove it yet.



Loosen the top bridge pinch bolt.

