


REAR WHEEL/SUSPENSION

Wheel bearing removal


Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

TOOLS:

Bearing remover head, 20 mm 07746-0050600
Bearing remover shaft 07746-0050100

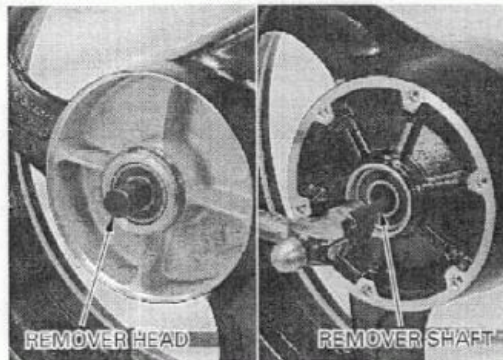

ASSEMBLY

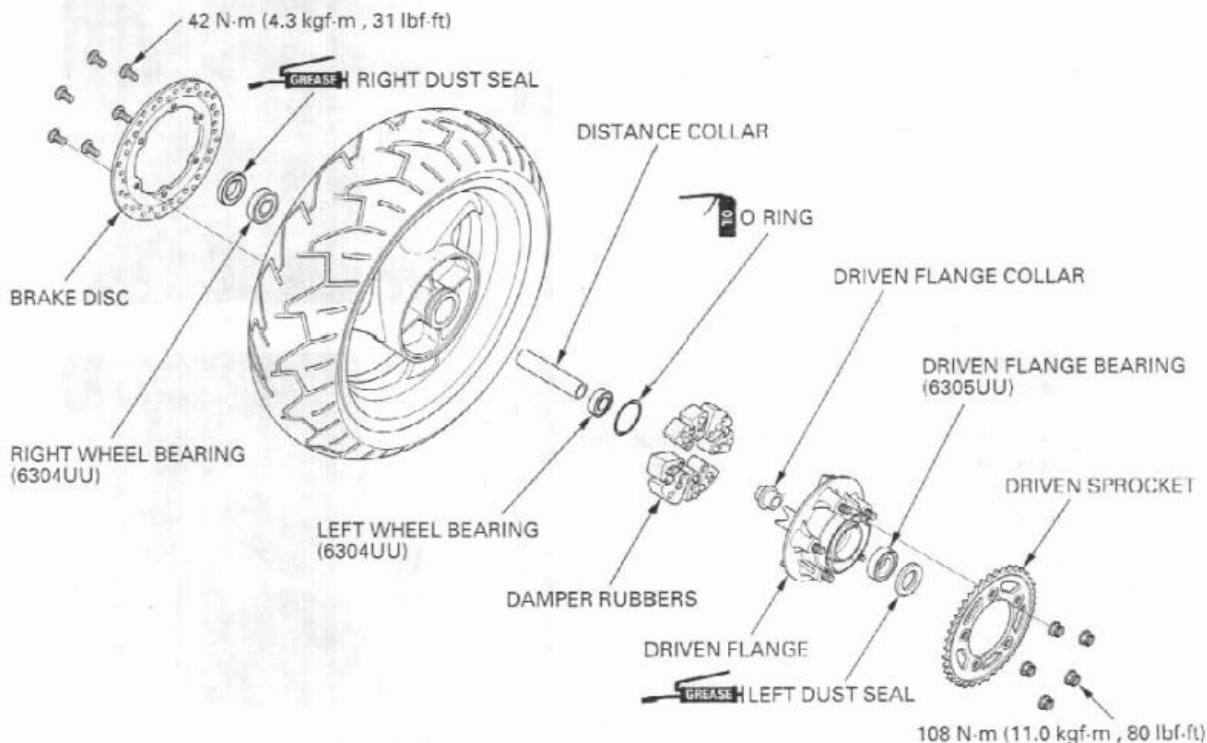

Wheel bearing installation

CAUTION:

Never install the old bearings. Once the bearings has been removed, the bearing must be replaced with new ones.

Drive in a new right bearing squarely. Install the distance collar, then drive in the left side bearing.

TOOLS:

Driver 07749-0010000
Attachment, 52 × 55 mm 07746-0010400
Pilot, 20 mm 07746-0040500

