

TOOL

Snap ring pliers

07914-SA50001 or 07914-3230001

TROUBLESHOOTING

Brake lever/pedal soft or spongy

- Air in hydraulic system
- Leaking hydraulic system
- Contaminated brake pad/disc
- Worn caliper piston seal
- Worn master cylinder piston cups
- Worn brake pad/disc
- Contaminated caliper
- Caliper not sliding properly
- Low brake fluid level
- Clogged fluid passage
- Warped/deformed brake disc
- Sticking/worn caliper piston
- Sticking/worn master cylinder piston
- Contaminated master cylinder
- Bent brake lever/pedal

Above items are normal but the brake system still has poor performance, check for nose dive during braking. If the nose dive excessive, check for secondary master cylinder hydraulic system.

Brake lever/pedal hard

- Clogged/restricted brake system
- Sticking/worn caliper piston
- Caliper not sliding properly
- Clogged/restricted fluid passage
- Worn caliper piston seal
- Sticking/worn master cylinder piston
- Bent brake lever/pedal

Brake drags

- Contaminated brake pad/disc
- Misaligned wheel
- Clogged/restricted brake hose joint
- Warped/deformed brake disc
- Caliper not sliding properly
- Improper secondary master cylinder installed length
- Clogged/restricted brake hydraulic system
- Sticking/worn caliper piston
- Clogged master cylinder port

**Rear wheel locks when only the brake lever is applied/
Front wheel locks when only the brake pedal is applied (In
the case that all items are normal in "Poor lever/pedal
brake performance")**

- Improper secondary master cylinder push rod installed length
- Faulty proportional control valve (PCV)