

BATTERY

REMOVAL/INSTALLATION

Always turn the ignition switch to "OFF" before removing the battery.

Remove the seat (page 2-2).

Remove the battery holder band. Disconnect the negative cable and then the positive cable, and remove the battery.

Install the battery in the reverse order of removal with the proper wiring as shown.

NOTE:

Connect the positive terminal first and then the negative cable.

After installing the battery, coat the terminals with clean grease. Reinstall the removed parts.

VOLTAGE INSPECTION

Measure the battery voltage using a digital multimeter.

VOLTAGE:

Fully charged: 13.0–13.2 V
Under charged: Below 12.3 V

TOOL:

Digital multimeter Commercially available



BATTERY TESTING

⚠WARNING

Always clear the work area of flammable materials such as gasoline, brake fluid, electrolyte, or cloth towels when operating the tester, the heat generated by the tester may cause a fire.

Remove the battery (see above).

Securely connect the tester's positive (+) cable first, then connect the negative (-) cable.

TOOL:

Battery tester BM-210-AH or BM-210 (U.S.A. only)

