

**REMOVAL/INSTALLATION**

Disconnect the connectors.  
Remove the regulator/rectifier unit mounting bolts  
and regulator/rectifier.

Install the regulator/rectifier unit in the reverse  
order of removal.

