



Secure the side stand switch with a new bolt.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

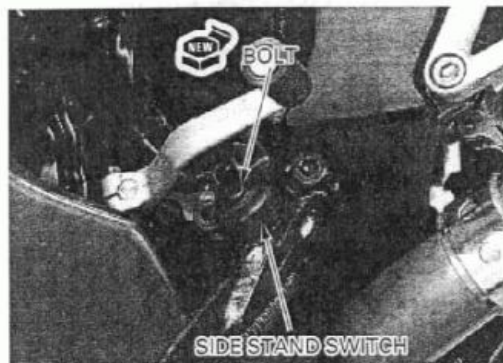

Connect the side stand switch 3P green connector.

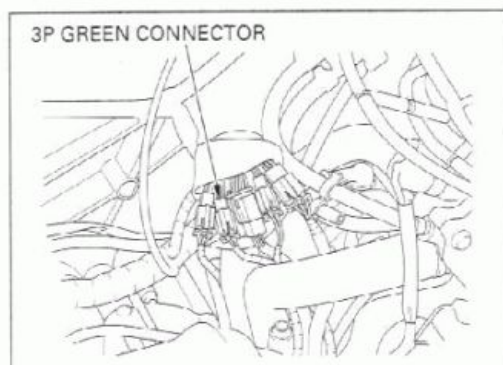


HORN

Disconnect the wire connectors from the horn.

Connect the 12-V battery to the horn terminal directly.

The horn is normal if it sounds when the 12-V battery is connected across the horn terminals.

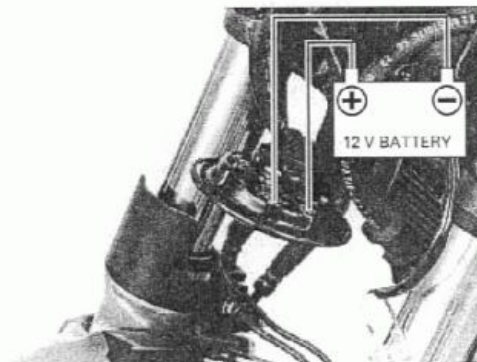

TURN SIGNAL RELAY

INSPECTION

Check the following:

- Battery condition
- Burned out bulb or non-specified wattage
- Burned fuse
- Ignition switch and turn signal switch function
- Loose connectors

If the above items are all normal, check the following:

Disconnect the turn signal connectors from the relay.

