

ENGINE DOES NOT START OR IS HARD TO START	22-1	POOR PERFORMANCE AT HIGH SPEED	22-4
ENGINE LACKS POWER	22-2	POOR HANDLING	22-4
POOR PERFORMANCE AT LOW AND IDLE SPEED	22-3		

ENGINE DOES NOT START OR IS HARD TO START

